

Encore E-2

Quick Tachometer Programming Guide

FEATURE "E" PROGRAMMING:

1. Turn the Ignition switch 'ON/OFF' 3 TIMES and stay in OFF position.
2. Push the Valet switch 7 times and hold in on the 7th push, when a long chirp is heard then release the valet switch. You are now in the feature 'E' programming mode.
3. Press the transmitter button corresponding to the feature you want to program.

1: Press and release the (ASTERIK) button until you get 2 chirps from the system. This will now put you into TACH MODE. If you are installing an IDATALINK module that sends tach through data, go to DBI TACH MODE which will give you 4 chirps from the E2.

2: Immediately press the UNLOCK button to enter RPM PROGRAMMING and you will hear 1 chirp.

3. Start the vehicle with the key, and if you have correctly connected the TACH input (white/red) or TACH is being sent through DATA, you will see the parking light circuit flashing steadily.

4: Press and HOLD the RED VALET switch until you hear a long chirp.

5: Turn the vehicle ignition off.

6: System will chirp 3 times to EXIT PROGRAMMING MODE.

Horn Honk output must be connected to hear the system chirp during programming

FOR AUTHORIZED DEALER TECHNICAL SUPPORT,
PLEASE CALL Toll Free :(855) GO-ENCORE
(855) 463-6267 : 8:00 am TO 5:00 pm PST