

## TO REMOTE START THE VEHICLE:

When you want to start your vehicle,

- Press \* button Twice on the transmitter.
- The parking light will activate to indicate the remote start received the signal.
- The engine will start in approximately 5 seconds.
- Once the engine is running, after couple seconds the parking lights will turn on and the climate controls will activate and adjust the vehicle's interior temperature to your preset setting.
- The vehicle will run for a programmable 5 to 30 minute cycle before shutting down.

### NOTE: The Remote Start Unit will not start the vehicle if any one of the following conditions exists:

1. The hood is opened.
2. The brake pedal is pressed.
3. The optional remote start enable toggle is switched to the "OFF" position. (If installed)
4. The gear selector is in any gear other than "PARK" or "NEUTRAL".

### SAFE START (Child safety mode)

Factory default is set to press the \* button Twice on the transmitter to start the vehicle. This feature to eliminate an accidental remote start:

1. The user presses the transmitter \* buttons **twice** within 3 seconds to start the vehicle.

**NOTE: Contact your installing dealer to de-activate this feature for one push start**

### OPERATE THE VEHICLE WHILE RUNNING FROM THE REMOTE START:

To operate the vehicle while the engine is running from the remote start,

- Insert the ignition key and turn it to "ON" (not the start) position.
- Press the brake pedal.

**Note:** If the brake pedal is pressed before the key is in the ON position, the engine will shut down.

### TEMPORARY STOP FEATURE:

This feature allows the vehicle to remain running after the key has been removed from the ignition. This feature is useful for occasions when you wish to exit and lock the vehicle for short periods of time, but would like to leave the motor running and the climate control on.

- Before turning off the engine, press the \* button twice on the transmitter and the LED indicator will flash 3 times to confirm enter.
- Turn the ignition key to OFF position. (The engine will stay running.)
- The engine will run until the pre-programmed time elapsed or shutdown input is received.

## Remote Start Operation:

### TO TURN OFF THE REMOTE START:

When the engine is running (by remote start), if you want to stop it,

Press \* button twice on the remote transmitter under the remote start mode.

Press this button once if the unit is programmed for one push start.


#### Press the brake pedal

The vehicle will shut down and turn off the parking light to indicate the engine has stopped.

#### SHUT-DOWN INPUT FOR REMOTE STARTER:

If any of the following conditions exist while the system is operating, the engine will not start or will shut down immediately:

1. **The hood is opened.**
2. **The brake pedal is pressed.**
3. **The parking (hand) brake is released (For Turbo Timer Mode)**
4. **Engine is over-revved. {"Tachometer checking type" only}**
5. **The pre-programmed run time (5 / 10 / 20 / 30 minutes) has elapsed.**
6. **Press \* button on the remote transmitter under remote start mode.**
7. **The vehicle refused to start running after {3} unsuccessful attempts.**

 **Encore** Automotive Systems, LLC.  
All rights reserved.

For Warranty information, Please go to [www.encoreautomotivesystems.com](http://www.encoreautomotivesystems.com) and download the complete user's manual. For customer service, please call us toll free @ **(855) GO-ENCORE 855.463.6267**. 8:00-5:00 PST Thanks for your purchase!

## ENCORE LIMITED LIFETIME WARRANTY PROVISIONS

( U.S. ,Continental U.S. and Canada Only)

1. Encore Automotive Systems LLC. WARRANTS that this new unit has been thoroughly inspected and tested at the factory prior to delivery. Your Encore equipment is guaranteed for "life" to the original purchaser/user of the equipment and the original vehicle in which it was installed by an authorized installer under the following conditions: If the product proves defective (according to Encore's testing) within the first year, the defective unit may be exchanged or repaired free of charge. "Proof of Purchase" (dated sales receipt) must accompany all warranty returns; **otherwise, your return will be rejected and sent back.** After one (1) year, the purchaser should ship the unit prepaid to Encore with a money order in the amount of \$30.00 to cover shipping and handling charges. **Note:** The product needs to be registered online at time of installation. To register this product go to, [www.encoreautomotivesystems.com](http://www.encoreautomotivesystems.com) .
2. Exclusion to the Limited Lifetime Warranty Provision: All two-way LCD and two-way OLED remote transceivers are excluded from the Limited Lifetime Warranty noted in paragraph no.1. All two-way LCD and two-way OLED remote transceivers are guaranteed to the original purchaser for a period of one year from date of purchase. If the product proves to be defective within the first year, the defective unit may be exchanged or repaired free of charge. All other provisions stated on this card apply.
3. This WARRANTY will be considered void if the equipment has been misused, neglected, improperly serviced or installed, altered, dropped or damaged by water, contrary to the Encore OPERATIONS MANUAL. Or, if used with accessories not approved by Encore, which may have contributed to the defect. **See note below regarding product installation\*\*.**
4. The purchaser's remedies under this WARRANTY shall be limited to the repair or replacement of electronic components only. **THE FOLLOWING IS NOT COVERED:** Damages or deterioration to cases, batteries, covers and cabinets; the cost of repairs, replacement and labor of which shall be borne by the purchaser even if occurring during the WARRANTY period.
5. Any equipment or parts which are claimed to be defective under this WARRANTY must be sent to the Encore Service center with "**proof of purchase**" at the purchaser's expense prior to such return, a Return Authorization Number needs to be obtained. Encore will return the equipment, charges prepaid. Warranty Service can be provided through the dealer where the equipment is originally purchased.
6. Any unexpired WARRANTY shall be applicable to equipment and parts in the possession of the original purchaser only.
7. THIS WARRANTY IS IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.
8. Encore shall not be liable, under the foregoing WARRANTIES or otherwise, for: Any personal injury or property damage of any kind to the purchaser or property, its employees or agents or anyone else whomsoever resulting directly or indirectly from the use or presence of the equipment or parts; Consequential damages of any kind; any inability of the purchaser to use the equipment.

**\*\*IMPORTANT NOTE: Any damages resulting from an installation performed by anyone other than a professional installation technician authorized by Encore will void the product's Limited Lifetime Warranty.**

## QUICK START USERS GUIDE

If you do not understand any part of this quick start users manual and would like the complete version, Please visit our web site @ [www.encoreautomotivesystems.com](http://www.encoreautomotivesystems.com)  
The complete manual is necessary for advanced users and not all user functions are covered in this quick start guide.

# ENCORE

# E-2

**THIS PRODUCT IS DESIGNED FOR PROFESSIONAL INSTALLATION ONLY**

### Encore E-7s Remote Transmitter



### REMOTE TRANSMITTER OPERATION:

E7s Transmitter Button	System Function	Remark
	Lock Doors	
	Panic	<b>Press &amp; hold for 3 sec.</b>
	Unlock Doors	
	Two Steps Door Unlock & Disarm System	Press twice within 3 seconds.
	Trunk Release (Channel 3)	Press and Hold for 2 seconds
	Activate The Remote Start	Push twice to start
	Stop remote start operation **	Push Twice to stop engine
	Switching code For 2nd Car Operation.	

The units default is safety start. This requires the user to push the start button twice to remote start the vehicle and prevent accidental starts. The unit can be programmed to start on one push of the start button. Programming required.

### BATTERY CHANGING:

Depending on the usage, the remote batteries should be changed at least once a year.

The 1-way remote, (E-7s) is powered by a pair of **3V, CR2016** batteries. These batteries are available at most locations batteries are sold and can be replaced by the user.

### CHIRP INDICATORS:

Chirp	Function
1 chirp	Lock
2 chirps	Unlock

### LED if installed

LED	Function
Off	Unlock
Slow Flash	Locked
On (Solid)	Valet Mode

### OPTIONAL: E2s Ultra Miniature Remote

This optional remote can be used in applications where the factory Keyless entry system is the main source for locking and unlocking the vehicle. For example, vehicles with the factory smart key/ "push button" start or one-piece remote with key, an **E2s** Ultra Miniature remote may be purchased for remote start and unlock only applications. This ultra-small remote may be preferred if your factory remote is integrated within your key.



### PARKING LIGHT:

Parking light	Function
1 flash	Lock
2 flashes	Unlock
ON	Running on remote start

### Optional E2s Two button remote

### WARNINGS:

As with any product that performs automatic functions, there are certain safety precautions that you must practice and be aware of.

- Keep the transmitter out of children's reach.
- Do not leave anyone in the vehicle while running on remote control.
- Alert servicing personnel that the vehicle can be started automatically.
- **Do not start the vehicle by remote while it's in an enclosed area or garage.**
- Always apply the parking brake and lock the vehicle as you exit the vehicle.
- The vehicle windows must be rolled up.
- Should the unit malfunction, disconnect the fuse until the problem is corrected.
- The use and operations of this system is the sole responsibility of the operator.
- Some areas may have local ordinances that prohibit leaving a vehicle running on public streets.
- **THIS DEVICE CANNOT BE USED ON ANY STANDARD TRANSMISSION VEHICLE. FOR AUTOMATIC TRANSMISSIONS ONLY!**

### PROGRAMMING TRANSMITTERS:

**Note:** This mode will only retain the last 4 remote transmitters programmed. If the transmitter memory is exceeded, the security system will start deleting transmitters from memory in chronological order.

1. Turn the Ignition 'switch **OFF/ON**' **4 TIMES** and stay in **ON position**. "Within 15 seconds".
2. Push the Valet switch **4 times** and hold it on the **4th** push until a long chirp is heard then release the valet switch. You are now in the Transmitter programming mode.
3. Press and hold any button of the transmitter until the siren responds with a confirming chirp, indicating the signal has been stored into memory.
4. If you have additional transmitters (up to 4) that need to be programmed, repeat step 3 for each transmitter.

**Exit:** Turn Ignition to 'OFF' position, or leave it for 15 seconds. 3 long chirps & 3 parking light flashes will confirm exit.

Please register your product @ [www.encoreautomotivesystems.com](http://www.encoreautomotivesystems.com)  
For Customer service, Please call (855) Go-Encore  
855-463-6267, 8:00-5:00 PST

### ACTIVE LOCK:

1. Press button on the transmitter.
2. The horn, if installed will chirp once and parking lights will flash once indicating that the system is now active. The vehicle doors will lock upon activating when interfaced with the keyless entry system.

### ACTIVE UNLOCK:

1. Press button on the transmitter.
2. The horn will chirp twice and parking light will flash twice to indicating that the keyless system is now unlocked. The vehicle doors will unlock.

### DEACTIVATING WITHOUT A TRANSMITTER

The Override function may be used if the remote transmitter is lost or inoperative.

1. Enter the vehicle and turn the ignition switch to 'ON' position.
2. Within 10 seconds push and release the valet switch

### VALET MODE:

The valet switch allows you to temporarily by-pass all system function, eliminating the need to hand your transmitter to parking attendants or garage mechanics. When the system is in valet mode, and remote start functions are bypassed, **Enter Valet Mode:**

1. Under Unlock condition, turn the ignition to "ON" position.
2. Press and hold valet switch for 2 seconds until the LED turns on. The LED will remain on as long as the system is in 'valet mode'.

### Exit Valet Mode:

1. Return to normal operation, turn ignition 'on'.
2. Press and hold valet switch for 2 seconds, The LED will turn off indicating that the system has exited the valet mode.

### IGNITION CONTROL DOOR LOCKS.

If the vehicle's door locks have been interfaced to the security system, the system will automatically lock the vehicle's doors when the ignition is turned "ON" and /or unlock the vehicle's doors when the ignition is turned "OFF".

### TRUNK RELEASE (Additional Installation Required)

Press and hold the button on transmitter for 3 seconds to activate the trunk release or other electric devices.

### PANIC FUNCTION:

The transmitter can be used as a remote panic switch to manually trigger the system in case of emergency.

1. Press and hold the button for 3 second. The unit will immediately sound.
2. During panic mode, the normal function of this transmitter button will be disabled. The transmitter and buttons can be used to lock and unlock the door (if the option is installed).
3. To stop the alarm, press and hold the transmitter button on the transmitter again for 3 seconds.
4. If the button is not pressed, the system will stop after 30 seconds.